

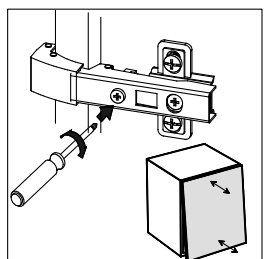
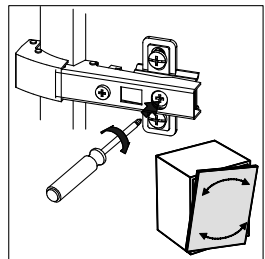
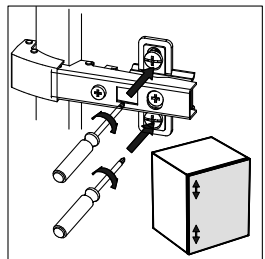
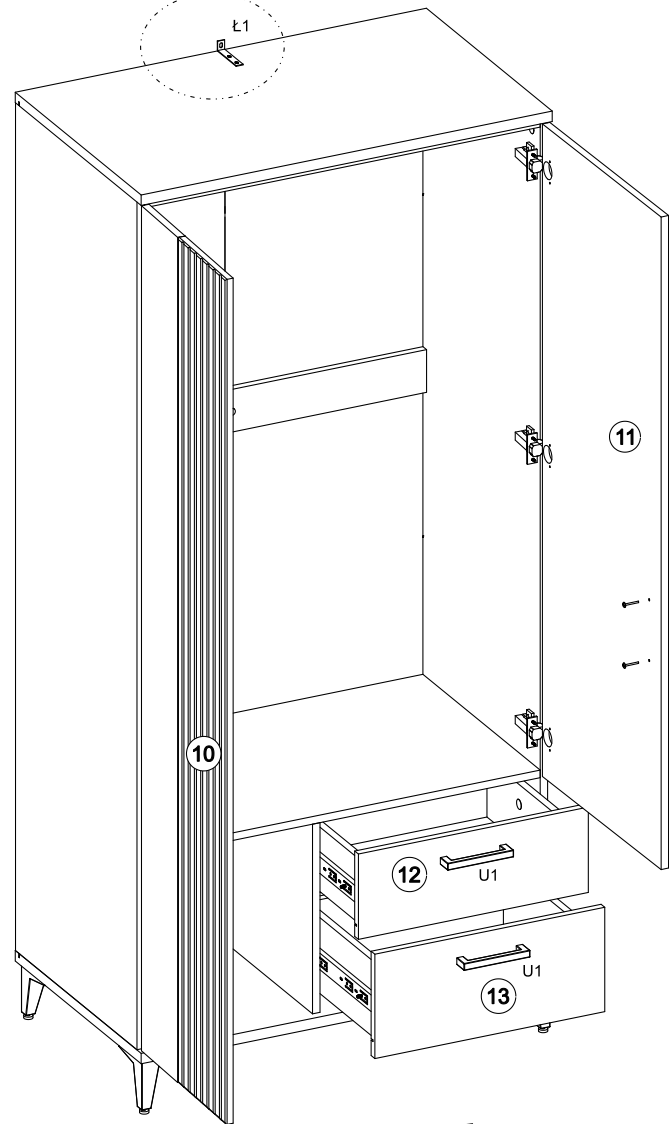
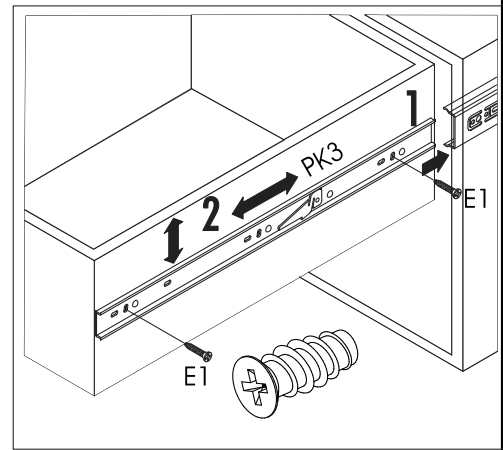
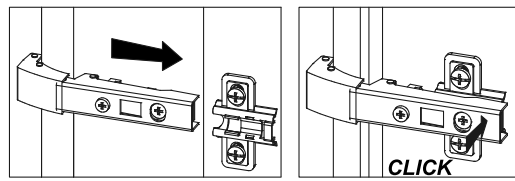
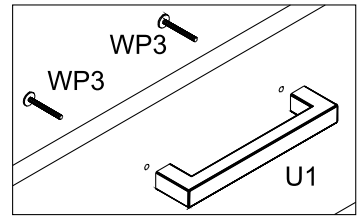
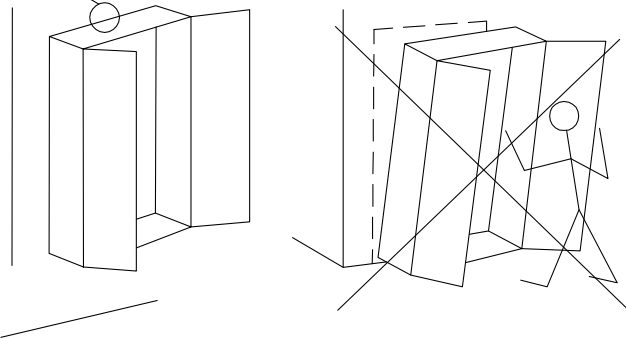
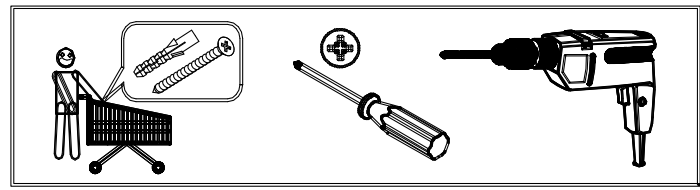
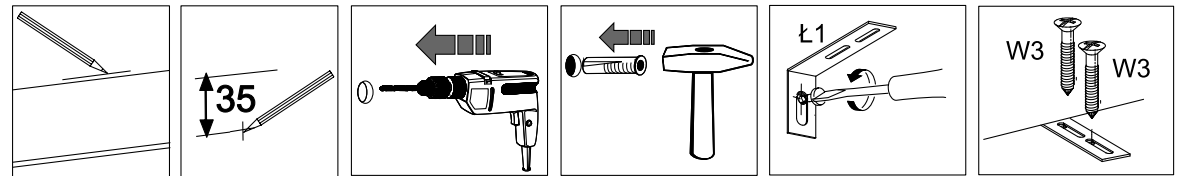
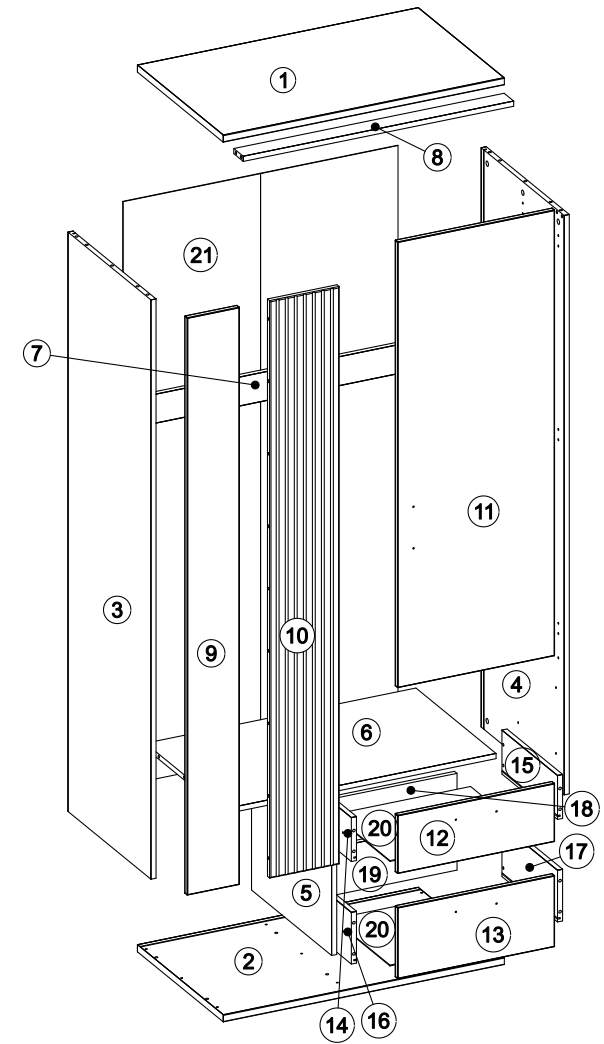
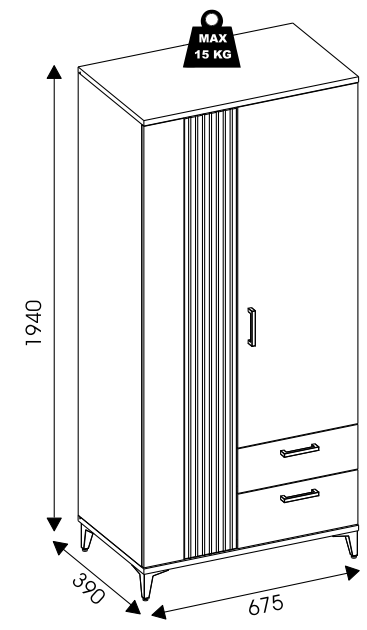
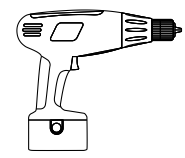

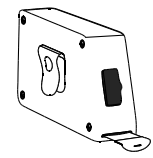
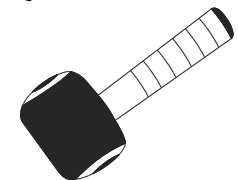
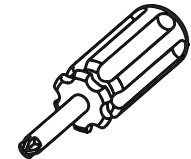



12

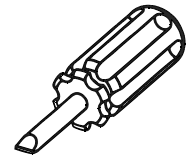









MODELL: AS10

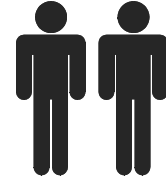




21	866x1802	3/3
20	356x432	3/3
19	417x148	2/3
18	417x265	2/3
17	350x160	2/3
16	350x160	2/3
15	350x136	2/3
14	350x136	2/3
13	495x220	3/3
12	495x180	3/3
11	1376x495	3/3
10	1782x219	3/3
9	1782x165	3/3
8	852x60	1/3
7	852x90	1/3
6	852x505	1/3
5	400x505	2/3
4	1788x523	3/3
3	1788x523	3/3
2	885x542	1/3
1	885x542	1/3













9x #14/863 ZN2	5x ZD000656R T3	3x 4x13 WP4	4x 8x50 K2	10x MK15/15 M3	2x #350 PK3	8x 6.4x50 K5	1x K20	
1x 4x30 W7	2x WS1	14x ST1	32x #20/863 ZN1	14x 3.5x16 W3	14x 3x20 W9	6x H=0 PRO	6x 4x30 WP3	4x N1
6x ZC0	22x 8x30 K1	3x U 1	1x LK008121S L1	34x #15/15 M1	34x DU232T T1	16x 5x20 W5	17x 2x20 G1	16x 5x11 E1

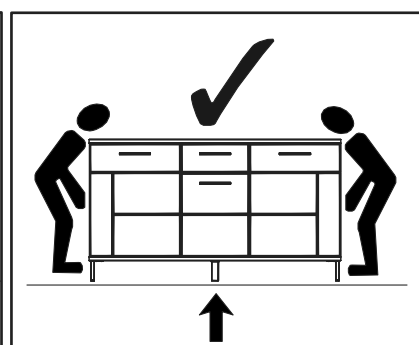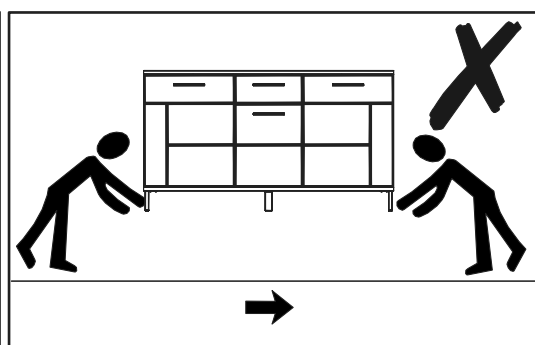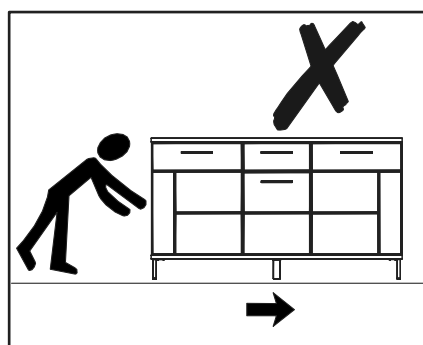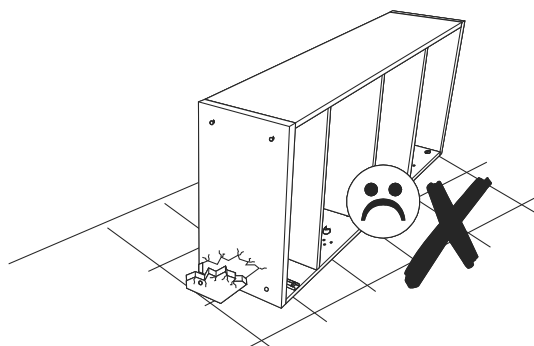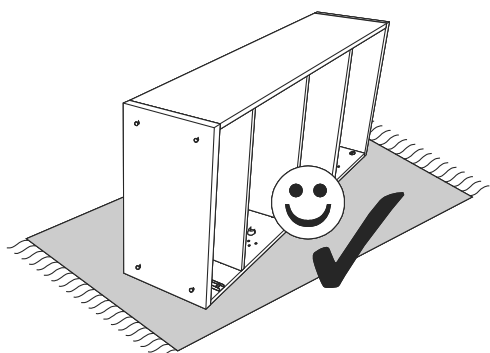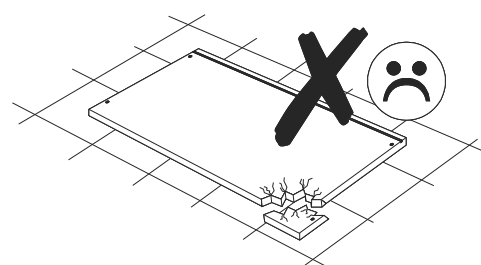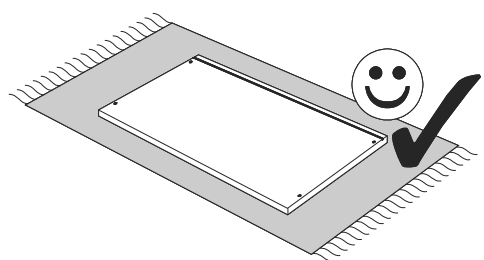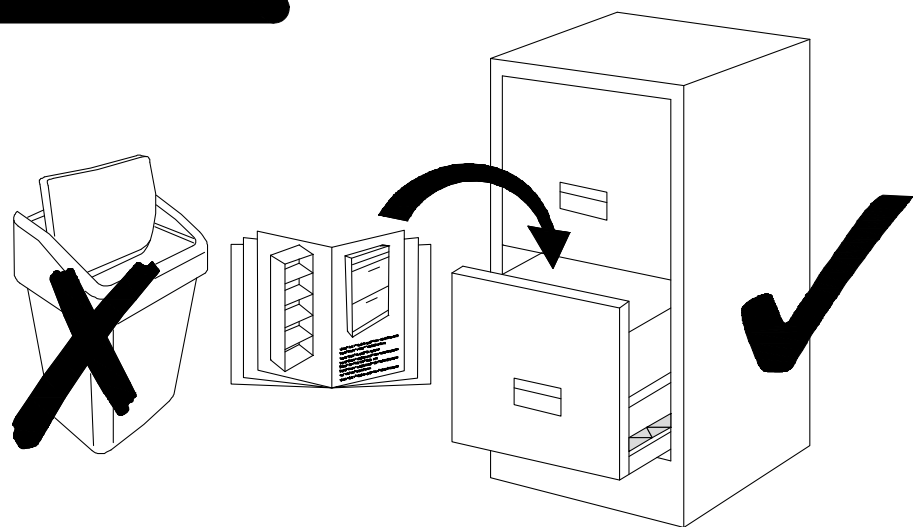


10▶

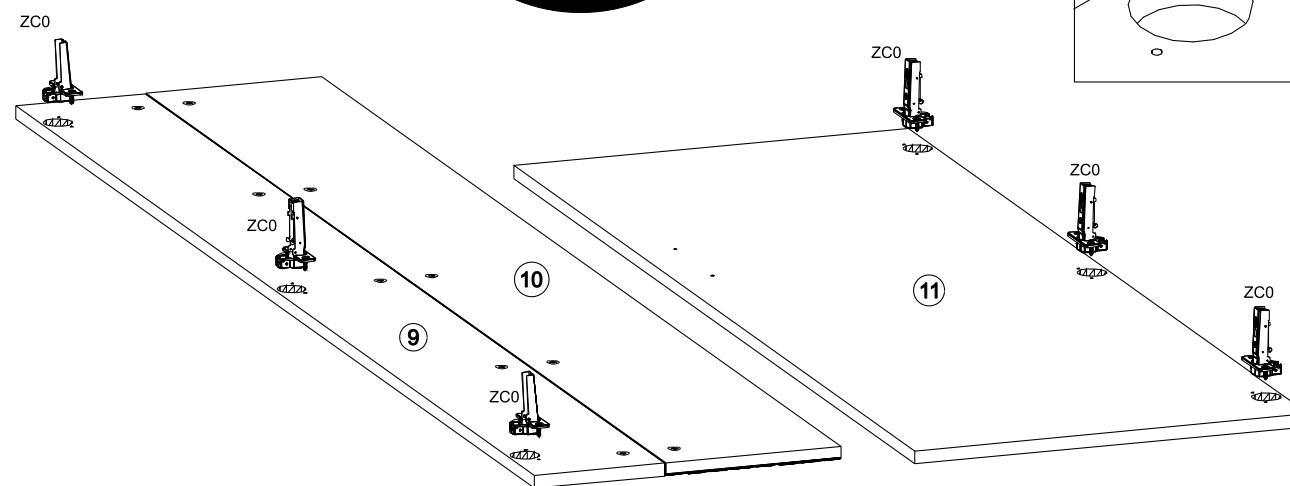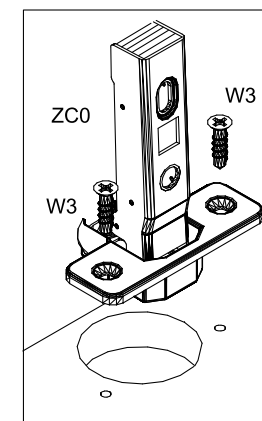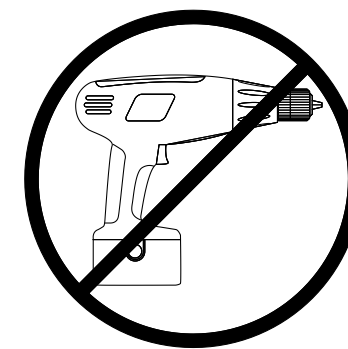

11▶

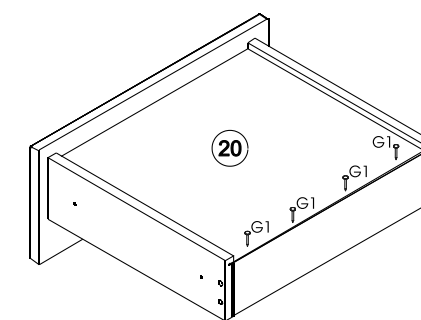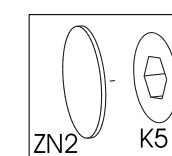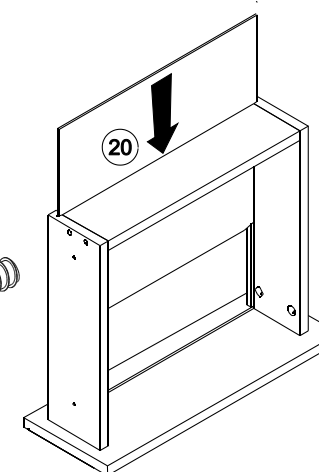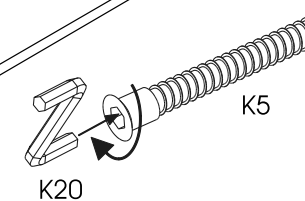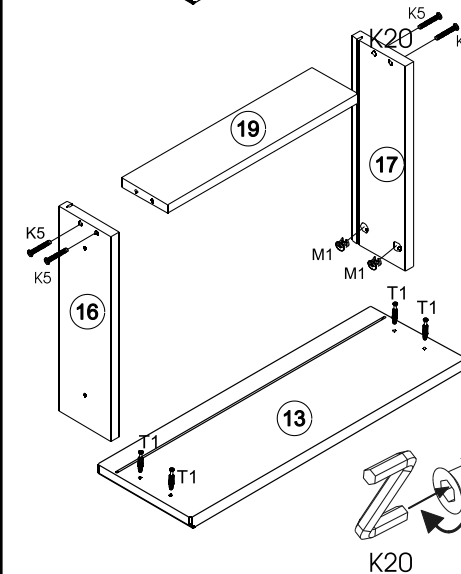
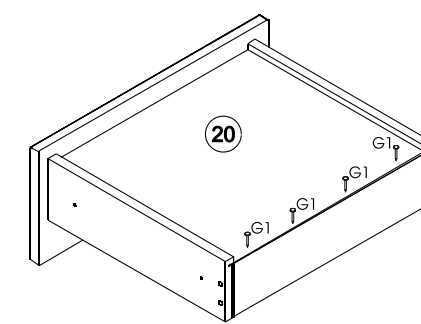
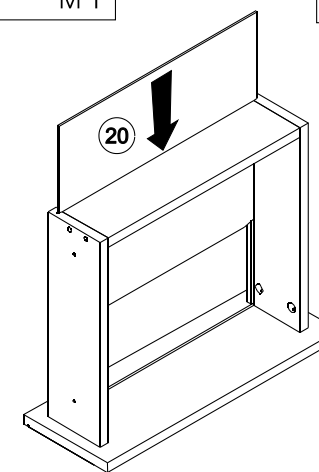
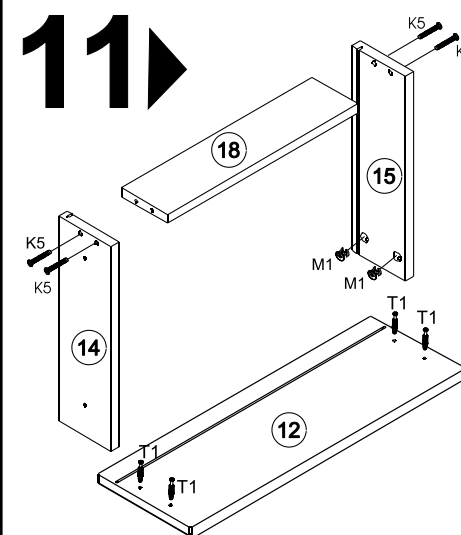
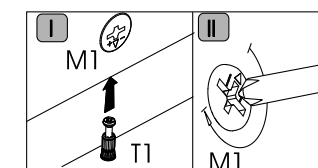
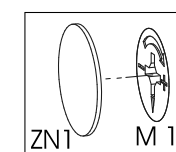


8

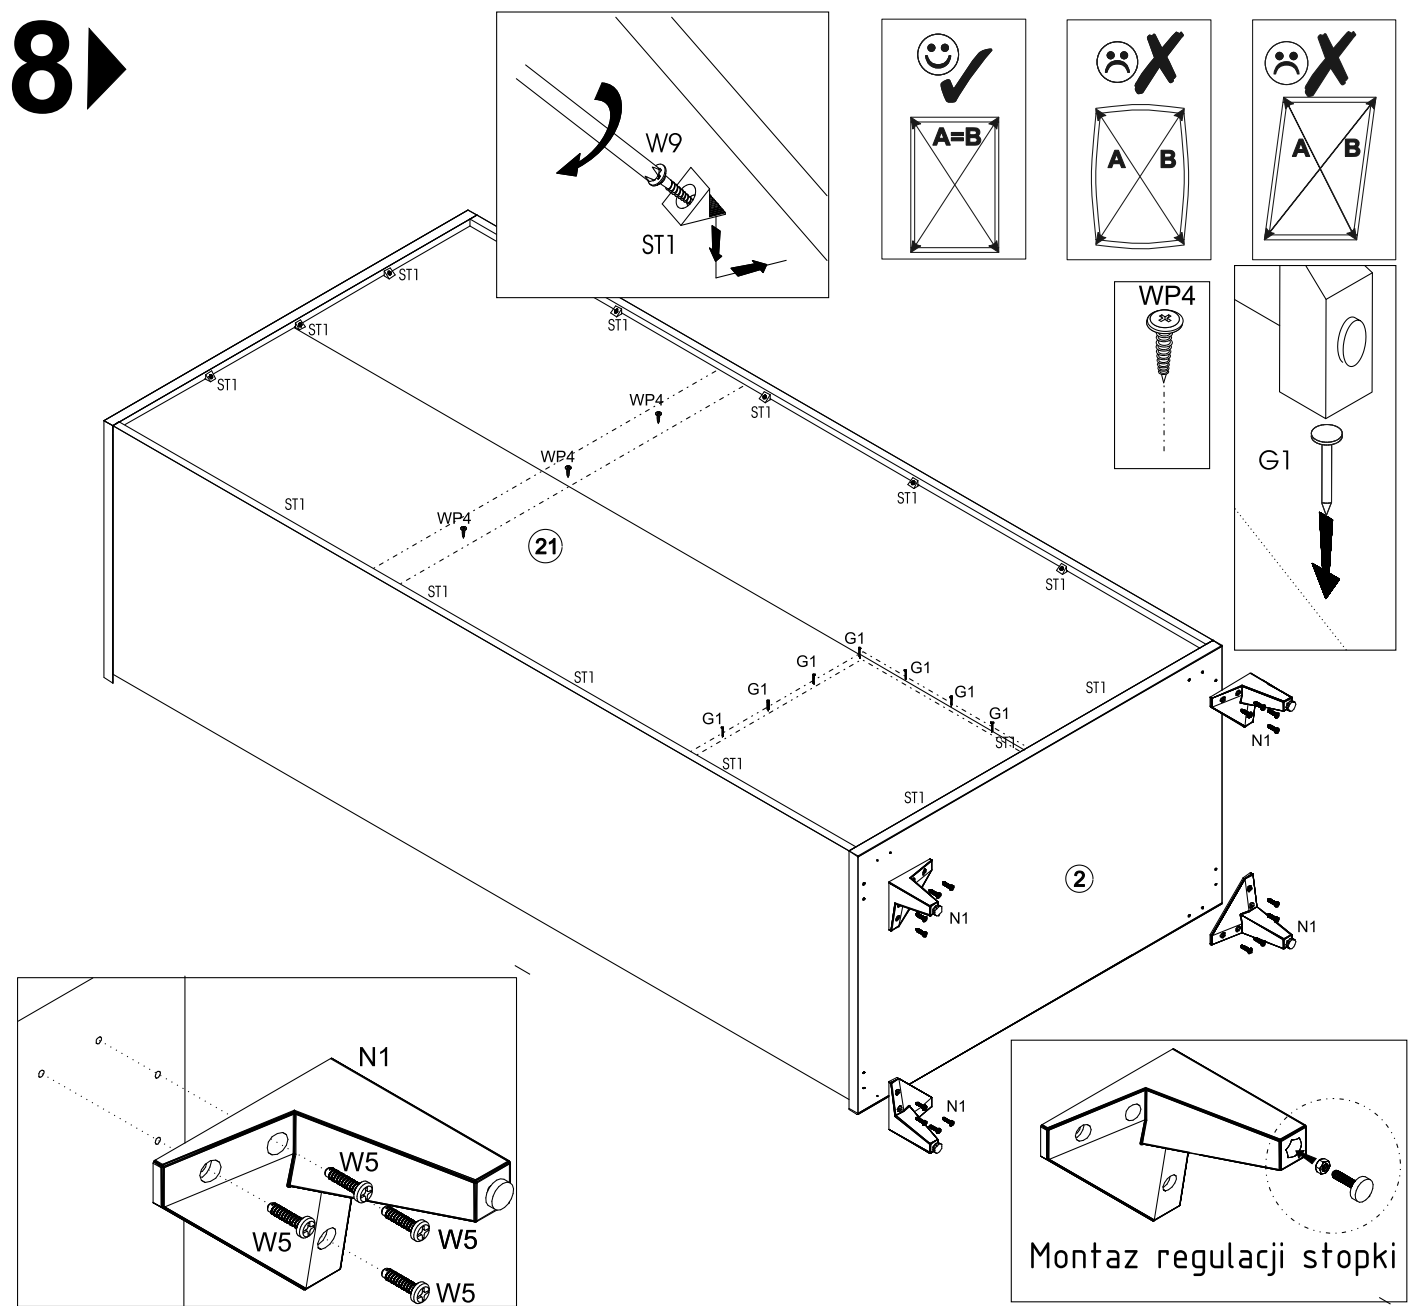


Montaż regulacji stopki


9

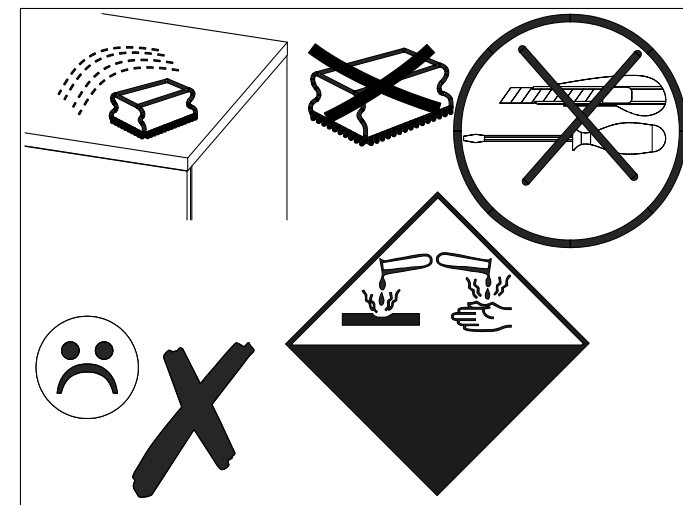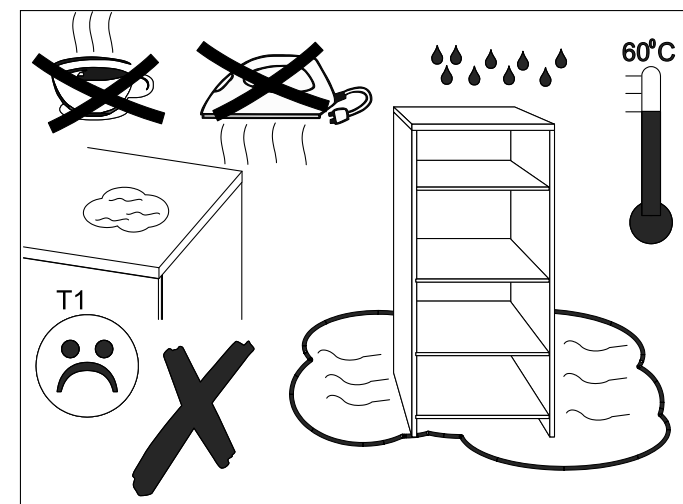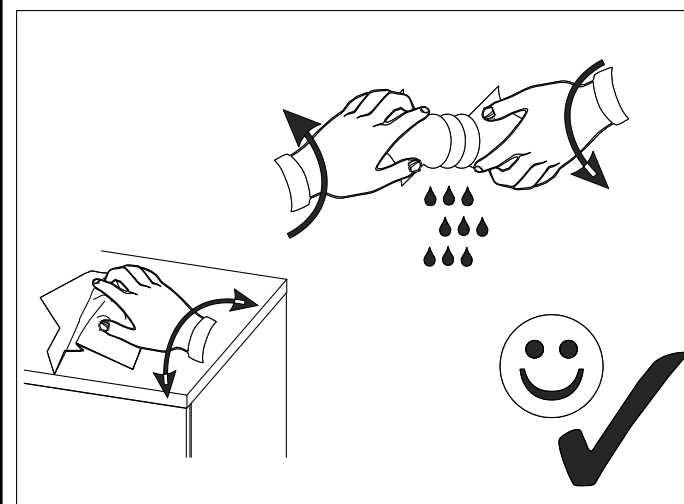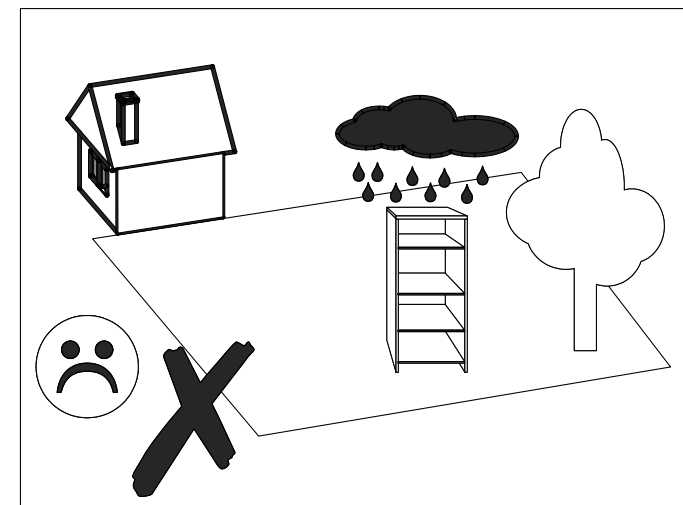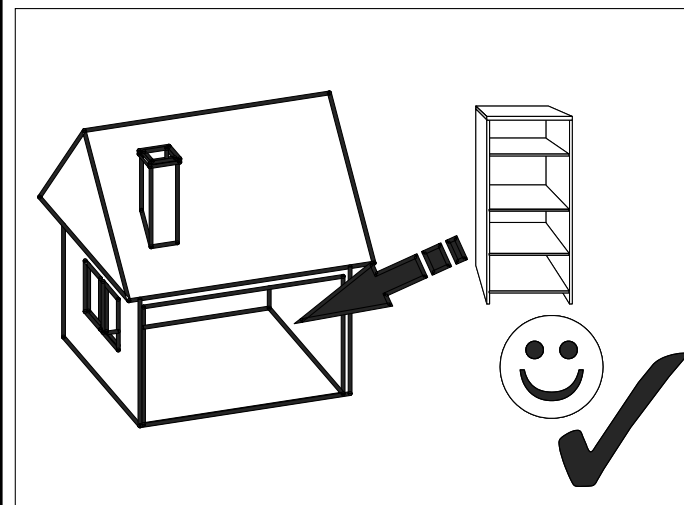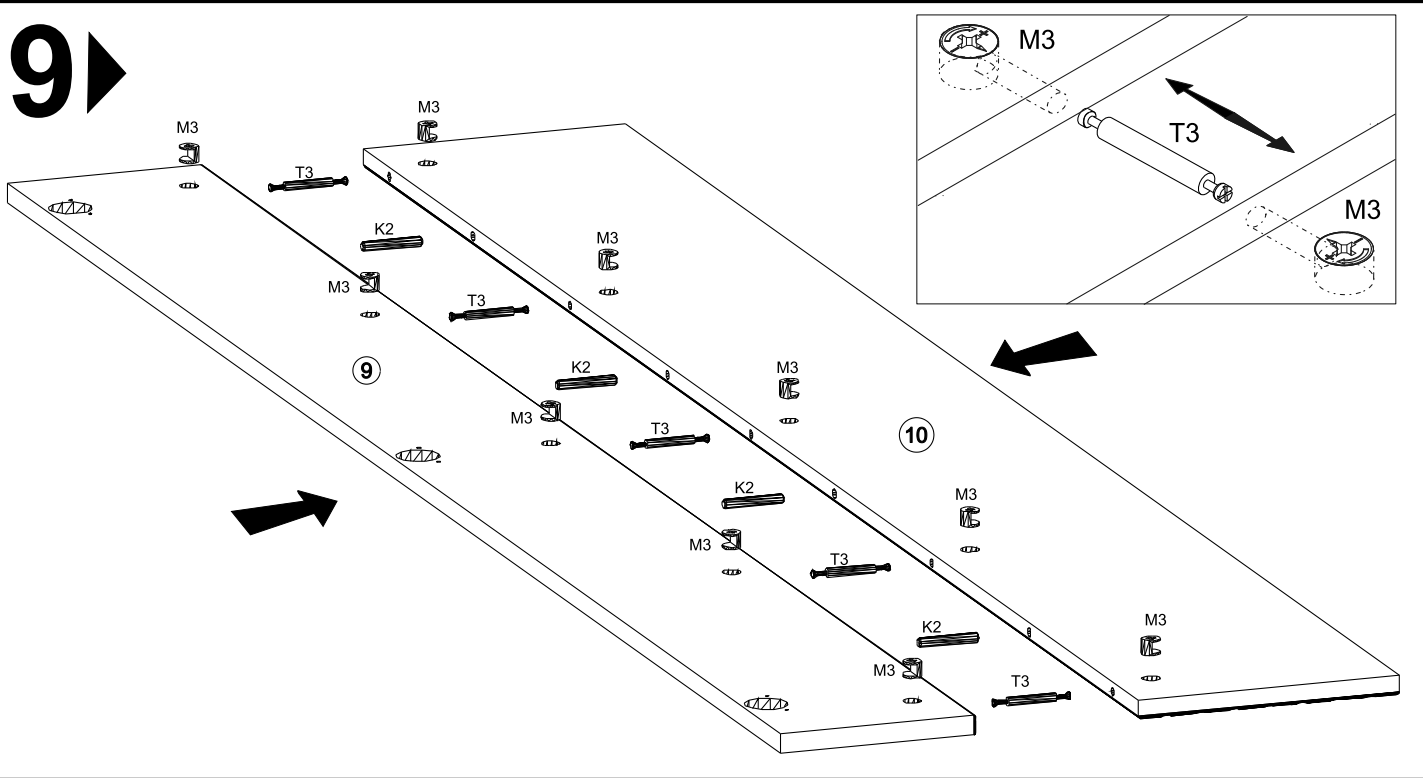


1 ▶

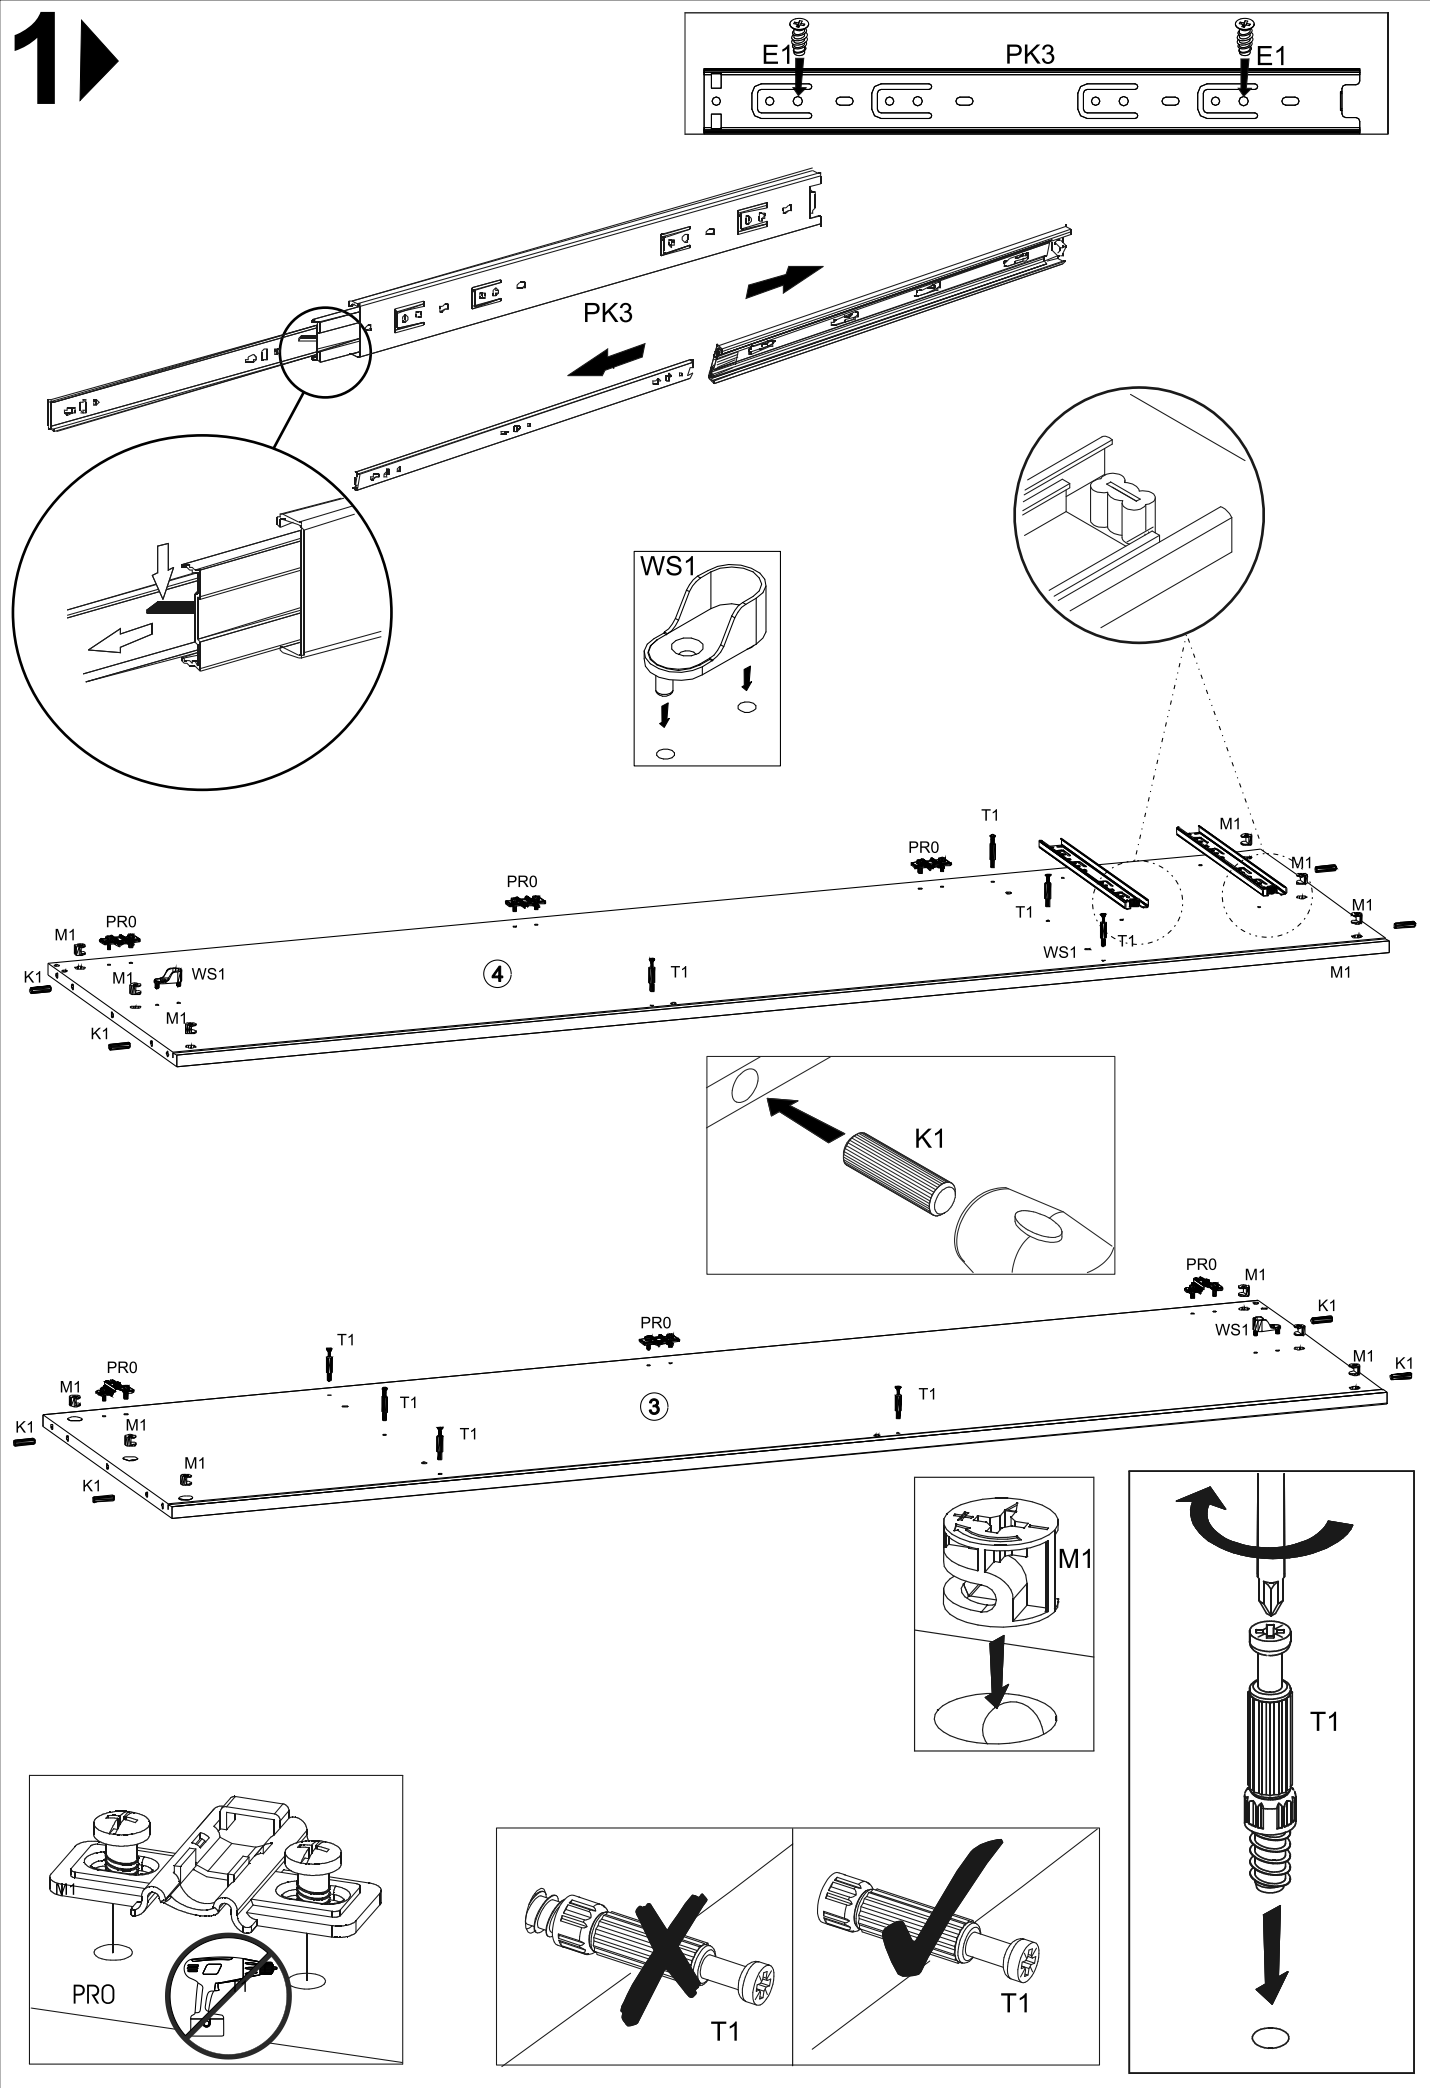




6 ▶

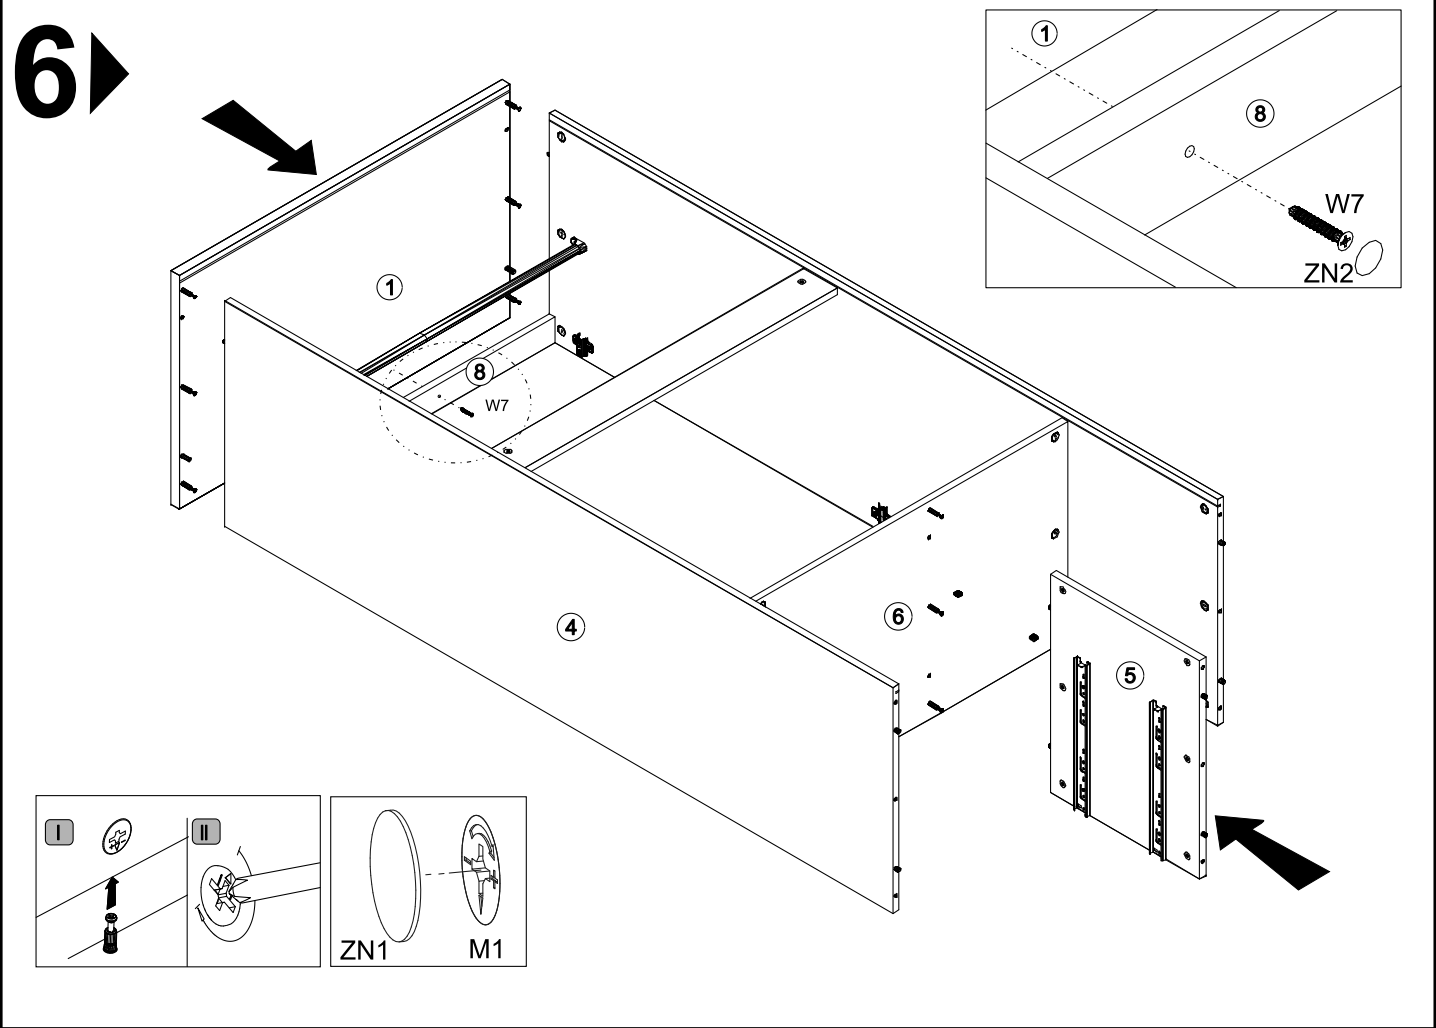





7 ▶

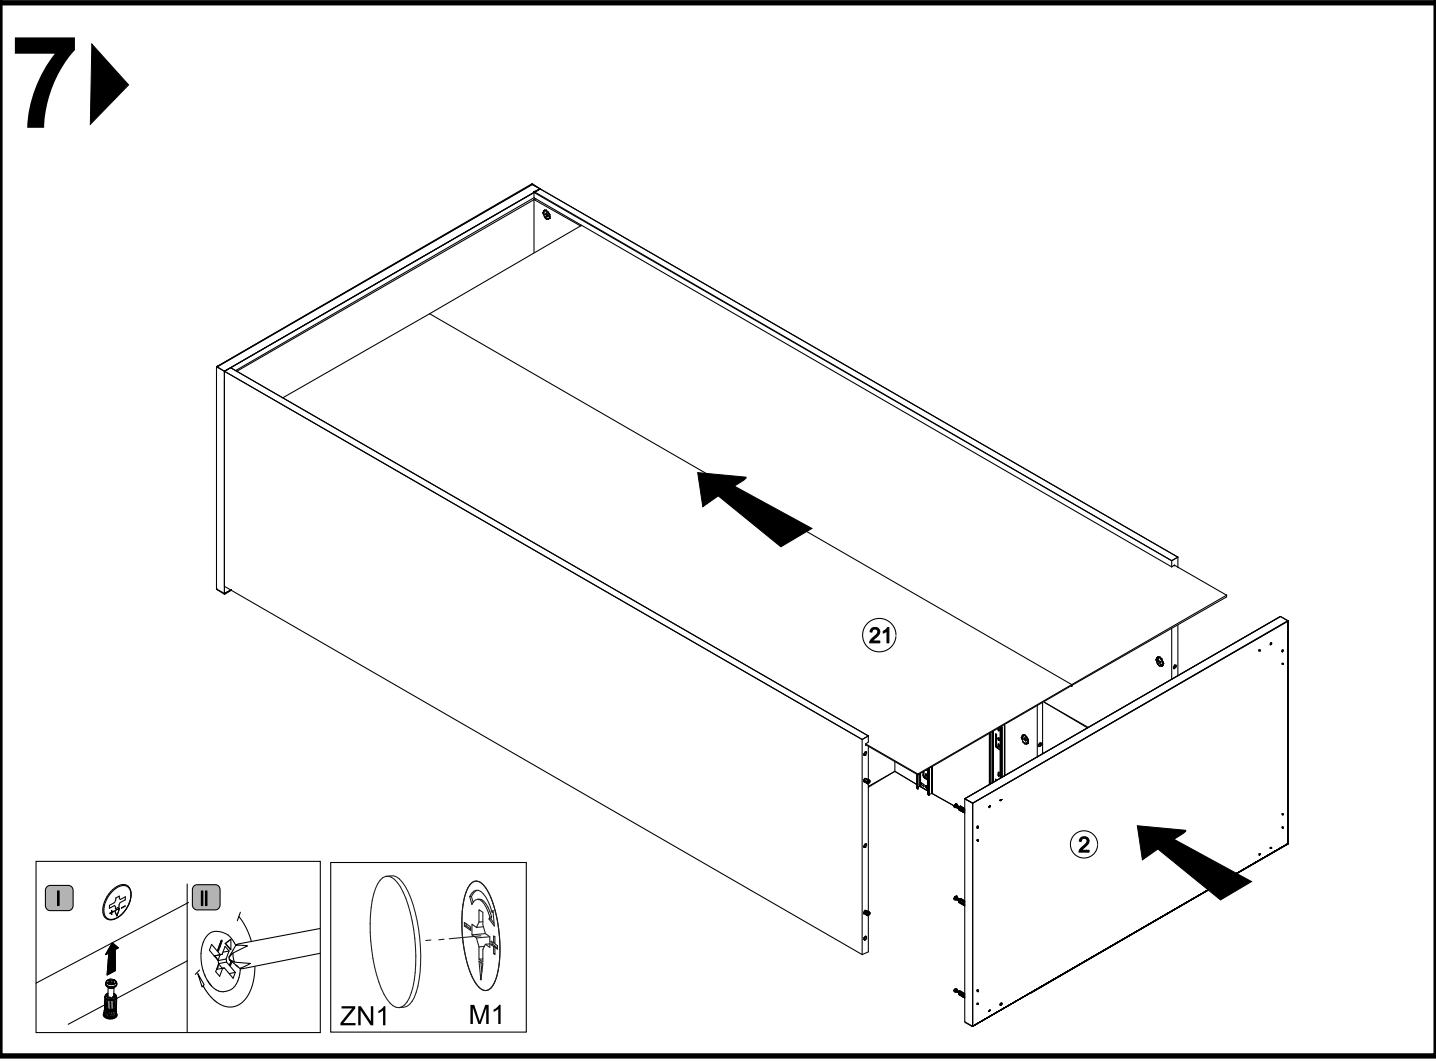


2

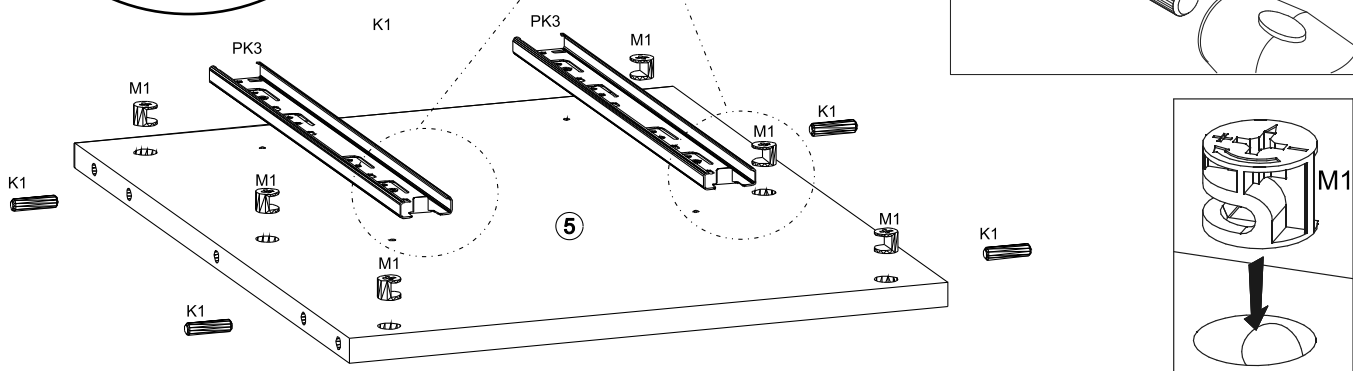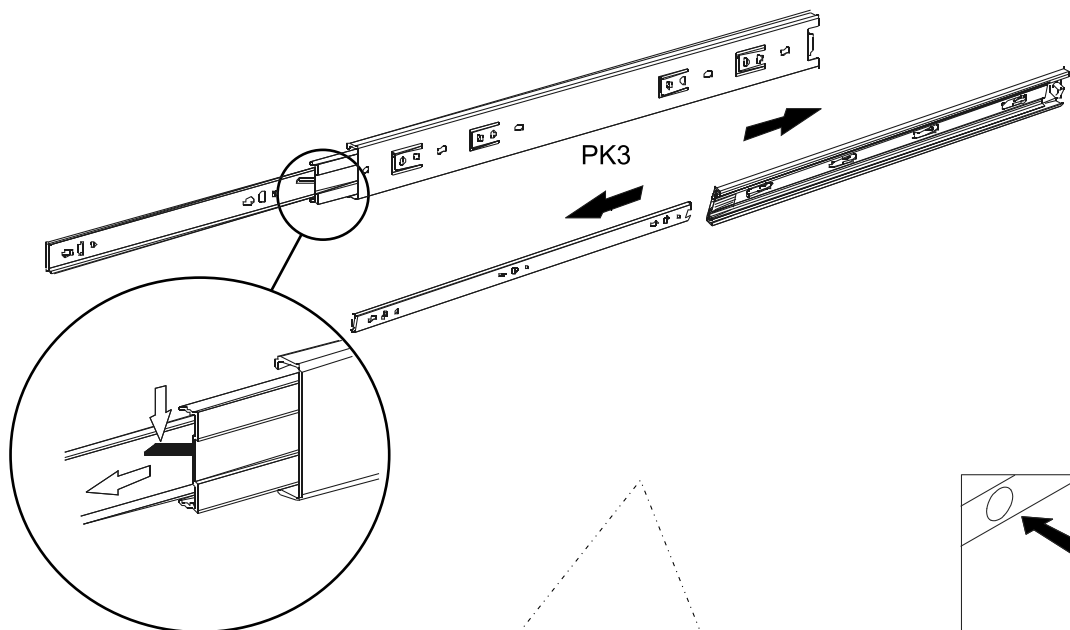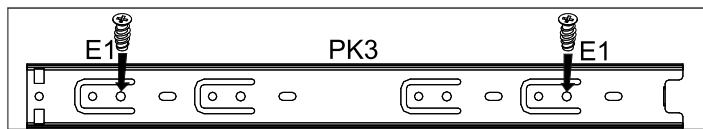

3

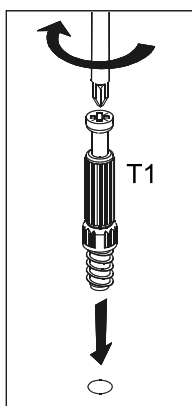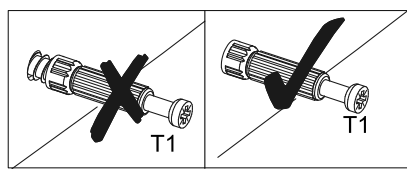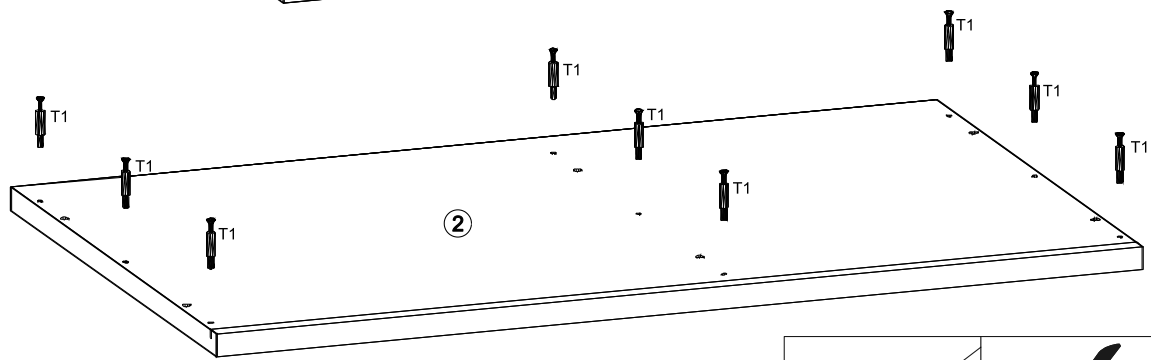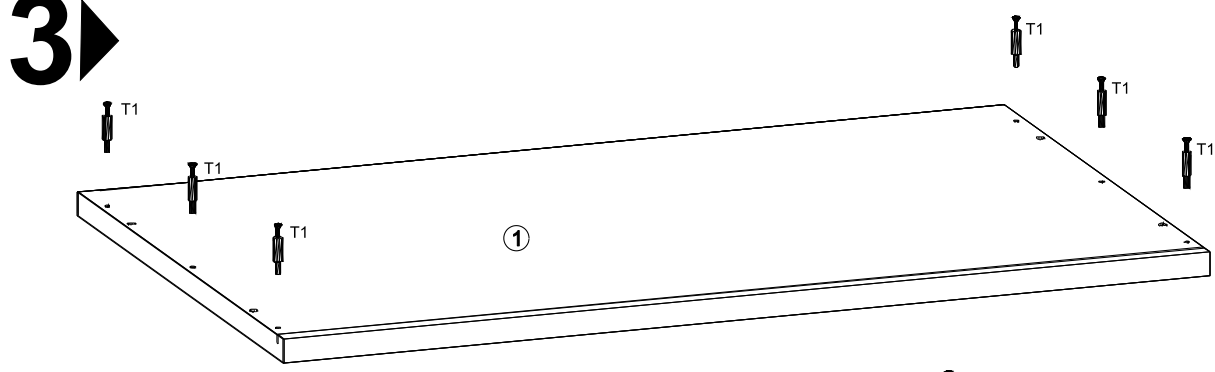

4

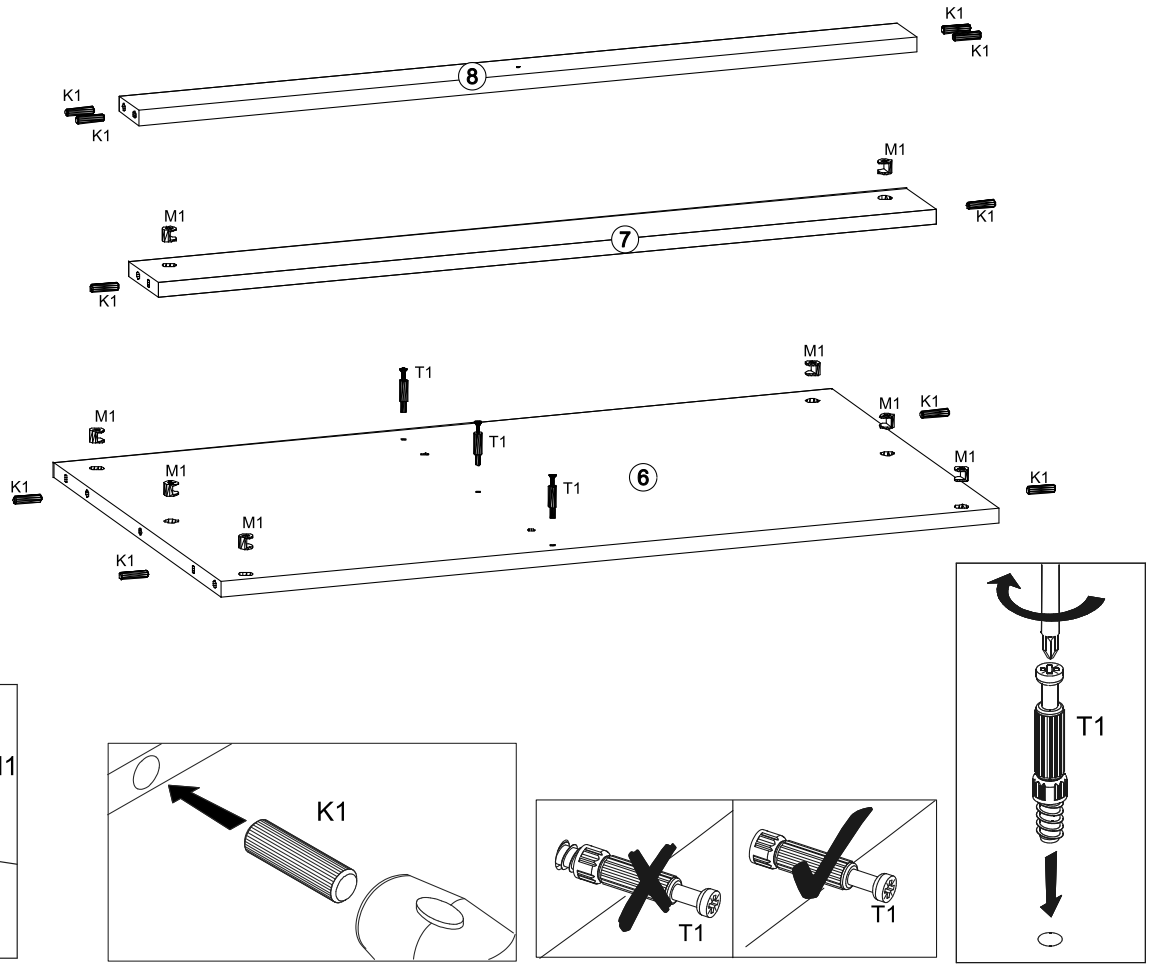

5

