


INSTRUKCJA MONTAŻU  
FITTING-UP INSTRUCTION  
ИНСТРУКЦИЯ СБОРКИ  
MONTÁ NY NÁVOD  
INSTRUCTIONS POUR LE MONTAGE  
INSTRUCCIONES DE MONTAJE  
SZERELÉSI ÚTMUTATÓ  
UPUTE ZA SASTAVLJANJE





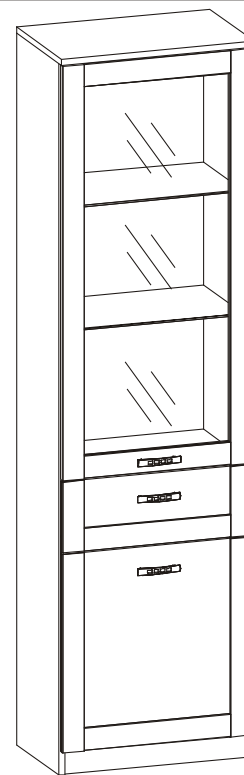




















Do montažu potrebne są:  
You need for fitting-up:  
Для сборки нужны:  
Pour le montage il faut:  
Para realizar el montaje es necesario:  
K montá i potrebujete:  
A szereléshez szükséges:  
Za sastavljanje su potrebne:



550x335x1980.  
szer./gt./wys.

- UA** Інструкція монтажу
- D** Montageanleitung
- GB** Assembly instructions
- ES** Instrucciones de instalación
- FR** Instructions de montage
- CZ** Montá ní návod
- PL** Instrukcja montażu
- HU** Összeszerelési útmutató
- SK** Montá ny návod
- RU** Инструкции по монтажу
- IT** Istruzioni di montaggio
- RO** Instructiuni de asamblare
- TR** Montaj talimati
- NL** Handleiding voor de montage

**BS 8**

<b>BS 8</b>					
 4x B 3	 9x G 3	 4x18 S 6	 2x T 4	 4x Z 4	 1x P 1
 6x12 A 6	 3x16 A 3	 8x B 2	 8x Z 1	 8x Z 1	 12/12 M 2
 4x G 1	 #0 Z 2	 4x B 1	 4x25 S 5	 3x U 1	 3,5x16 A 1
 4x W 1	 5x G 2	 4x K 3	 8x30 12x K 2	 #29,5 14x T 1	 15/16 M 1

