



www.MLMEBLE.pl

GB

D

CZ

SK

RUS

LT

assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija





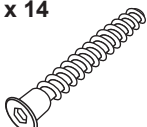


















INSTRUKCJA MONTAŻU

KSAWERY 03N

↑80 →69 ↗41

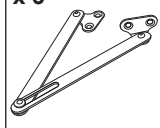

akcesoria / accessories / zubehör / příslušenství / prislušenstvo / аксессуары / furnitūra :

x 18  KK 8/32	x 6  KM 8/35	x 14  KT 6,3/50	x 8  ZA N	x 60  GZ 1,4/25	x 4  SG 8/8	x 6  MD	x 6  ZAM
x 8  PA Ø5	x 24  WT 3x16	x 12  WT 3,5x16	x 8  WT 4x27	x 4  WT 3x10	x 3  MB	x 3  RN	x 6  BDK
x 2  ZPL	x 2  ZPP	x 4  UTO	x 1  klej / glue / kleber / lepidlo / lepidlo / клей / kljaj	x 1  kluczyk / key / schlüssel / klíč / ključ / ключ / raktas			

do montażu potrzebne są:

are needed for assembly:


sind erforderlich für die montage:

jsou potřebné pro montáž:




sú potrebné pre montáž:

которые необходимы для сборки:

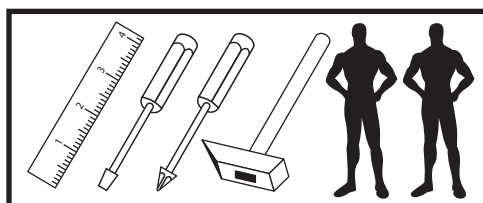Surinkimui reikės





	CODE			
1	KSAWERY03_01	690	405	1
2	KSAWERY03_04	690	336	1
3	KSAWERY03_06	648	326	1
4	KSAWERY03_07	648	60	2
5	KSAWERY03_08	539	323	2
6	KSAWERY03_09	535	195	3
7	KSAWERY03_10	535	108	1
8	KSAWERY03_11	350	80	2
9	KSAWERY03_12	484	80	1
10	KSAWERY03HDF_01	722	336	2
11	KSAWERY03HDF_02	512	355	1
12	KSAWERY03N_01_MDF	764	70	2
13	KSAWERY03N_02	766	368	1
14	KSAWERY03N_03	766	368	1
15	KSAWERY03N_05	690	336	1

