



www.MLMEBLE.pl

GB

D

CZ


SK

RUS

assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу



INSTRUKCJA MONTAŻU



OLIWER 21

↑ 68 → 138 ↗ 5

KSAWERY 06

↑ 133 → 50 ↗ 5


KSAWERY 07




↑ 102 → 69 ↗ 5




akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары :

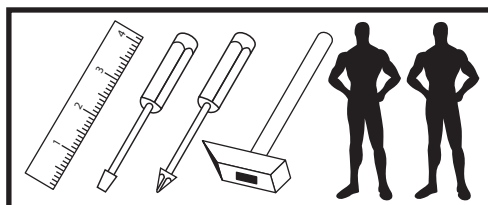x 4	x 4	x 2	x 2	x 2
WT 3,5x16	WT 3x10	ZW Ø30	ZPP	ZPL

do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:



	CODE KSAWERY 06			
①	KSAWERY06_01_MDF	1322	70	2
②	KSAWERY06_01	1328	500	1
③	4LUST-29	1326	354	1
④				
⑤				

	CODE KSAWERY 07			
①	KSAWERY07_01_MDF	1014	70	2
②	KSAWERY07_01	690	1020	1
③	4LUST-30	1018	544	1
④				
⑤				

